


Epson Projector Pen Instructions

You may use the Epson projector pen like a digital dry erase board. (Capturing the images that are projected onto a surface will require additional software to be installed during the school year.)

To use the pen you simply take them out of the box holder and flip the button from the (O) to the (I) you will see a green light briefly turn on then off. (If you do not see a green light then it may be necessary to replace the battery in the pen.)

Projector Parts - Interactive Pens

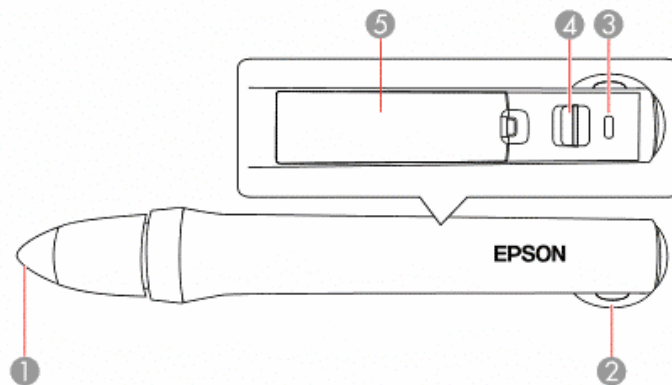

- 1 Pen tip
- 2 Attachment for optional strap or cord
- 3 Battery light
- 4 Power switch
- 5 Battery cover

Parent topic: [Projector Part Locations](#)

Once the pen recognizes the projector you will see an arrow on the left and right of the image that is projected.

Use one of the pens to click on the arrow and a menu will appear.



Note: both pens can be used but you may only write with one pen at a time in whiteboard mode.

If you would like an in depth look at how you may use your interactive pens please click the link below to watch the Epson video

- http://www.epson.com/cgi-bin/Store/Video-Library/video/Projectors_Product-Types_Interactive/How-to-Use-Computer-Free-Annotation-in-Whiteboard-Mode-on-BrightLink-436Wi-475Wi-480i-485Wi/1762310808001?BV_UseBVCookie=yes
- Calibration of your projector may be necessary for optimal performance of writing tools.
- http://www.epson.com/cgi-bin/Store/Video-Library/video/Projectors_Product-Types_Interactive/How-to-Calibrate-BrightLink-436Wi-475Wi-480i-485Wi-Projectors/1762306172001?BV_UseBVCookie=yes

If you have any questions on how to connect your computer laptop or any additional device please contact the cms help desk via email or phone.

cms help desk@clovis-schools.org

575-769-4502